
## FITTING INSTRUCTIONS FOR MOLDEX 8000 SERIES HALFMASK RESPIRATOR

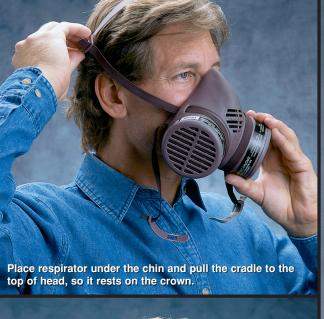



Attach the bottom straps behind the neck.



Adjust both straps to obtain a secure and comfortable fit Tighten by pulling on ends, or loosen by pushing out on



Positive Pressure Seal Check: Cover the exhalation valve vents, and exhale gently to create a slight positive pressure. If air leakage is detected, re-adjust the position of the facepiece and the tension of both headstraps, and repeat the seal check until leakage is eliminated.

## YOUR LUNGS DESERVE ALL THE PROTECTION THEY CAN GET.





Failure to follow all instructions and warnings on the proper use of this respirator, each time it is worn, may reduce respirator effectiveness, wearer protection and may result in sickness and/or death. It is the user's responsibility to obtain a proper fit. If you cannot obtain a proper fit, do not enter the contaminated area. OSHA Regulation 1910.134 (f) requires that the user be fit tested before being assigned a respirator. Do not wear with any facial hair, which may prevent the respirator from fitting properly, such as beards or long sideburns. For additional information, refer to your supervisor and/or see box or phone 800/421-0668 ext. 550 or 310/837-6500 ext. 550.





MOLDEX-METRIC, INC. 10111 W. JEFFERSON BLVD. CULVER CITY, CALIFORNIA 90232 www.moldex.com E-mail: sales@moldex.com U.S. Patent # D326,540, #5,505,197 and #5,736,041. 9700-789 REV C 2/06

