

1200 SERIES

N95 PARTICULATE RESPIRATOR



EASY FIT, MORE COMFORT


The molded nose bridge provides the wearer an easy comfortable fit. There's no metal noseband to adjust and the seal is maintained without pressure points.

DURA-MESH® SHELL LASTS LONGER

Take a bite out of your disposable respirator costs with Dirt Dawgs. The exclusive Dura-Mesh shell protects the filter media so it stays cleaner-looking longer. The shell also resists collapsing in hot, humid environments so the respirator holds its shape longer. The result is fewer respirators used and lower costs.

FEATURES

- Durability at an affordable price.
- Available in three sizes to fit more workers and increase OSHA compliance.
- Dura-Mesh shell resists collapsing in heat and humidity.
- Molded nose bridge seals easily without a metal noseband.
- Facepiece is naturally contoured without pressure points.
- Straps are securely attached so they don't break at the seal.
- Softspun® lining for increased comfort and durability.
- Certified under 42CFR84.
- Meets heat and flame resistance in accordance with ANSI/ISEA 110-2009 Section 7.11.1.
- 100% PVC-Free for a greener alternative.

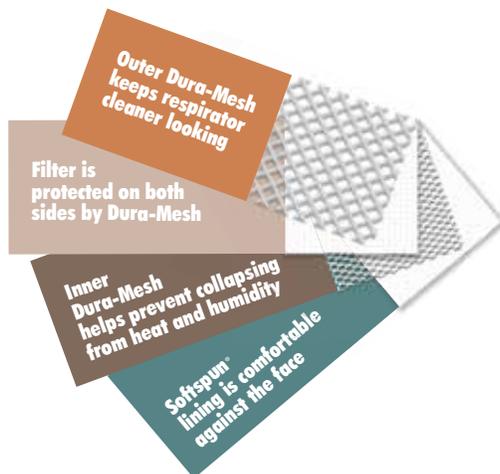

N95 APPLICATIONS:

Grinding, Torch Cutting, Sanding, Metal Pouring, Sweeping, Metal Working, Bagging, Foundries, Stone Quarrying, Agriculture, Metal Machining, Construction Sites, Cement, Ceramics Manufacturing, Underground Mining, Timber/Lumber Mills, Polishing, Buffing, Lime, Poultry, Textiles, Welding, Brazing, Soldering.

1200 SERIES

N95 PARTICULATE RESPIRATOR



Product Code	Size	Valve Type	Strap Material	Display Quantity	Case Quantity
1200N95	M/L	None	Latex	20/Box	18 Boxes
1201N95	S	None	Latex	20/Box	18 Boxes
1207N95	LP	None	Latex	20/Box	18 Boxes

WARNING TO USER

- Follow all instructions and warnings on the use of this respirator and wear during all times of exposure. Failure to do so will reduce respirator effectiveness, wearer protection and may result in sickness or death.
- Before use, the user must first be trained by the employer in proper respirator use, in accordance with applicable safety and health standards, for the contaminant and exposure level in the assigned work area.
- The particulates and other contaminants which can be dangerous to your health include those which you cannot see, taste, or smell.
- This product has not been sold with warnings or use instructions for personnel involved in healthcare or related situations, where there may be the possibility of contact with disease or biological hazards. If you are considering such uses, first call the Moldex Technical Service Department: +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550.

LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. Exclusive Remedies: damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex, products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or consequential, arising out of sale, use, or misuse, or the inability to use products by the user.

MOLDEX TECHNICAL ASSISTANCE

For more information call +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550 or E-mail: sales@moldex.com, tech@moldex.com or visit www.moldex.com.



MOLDEX-METRIC, INC.
 10111 Jefferson Blvd.
 Culver City, CA 90232
 TEL: +1 (800) 421-0668 or
 +1 (310) 837-6500
 FAX: +1 (310) 837-9563
 E-mail: sales@moldex.com
www.moldex.com

CANADIAN CUSTOMER SERVICE
 Tel: +1 (800) 421-0668, Ext. 550/512
 Fax: +1 (310) 837-9563



Moldex-Metric, Inc.
 CULVER CITY, CALIFORNIA, U.S.A.
 800/421-0668



THESE RESPIRATORS ARE APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS:

TC-	Protection ¹	Respirator			Cautions and Limitations ²
		1200N95	1201N95	1207N95	
84A-3167	N95	X	X	X	A B C J M N O P

1. PROTECTION

N95-Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil; time use restrictions may apply
2. CAUTIONS AND LIMITATIONS
 - A- Not for use in atmospheres containing less than 19.5 percent oxygen.
 - B- Not for use in atmospheres immediately dangerous to life or health.
 - C- Do not exceed maximum use concentrations established by regulatory standards.
 - J- Failure to properly use and maintain this product could result in injury or death.
 - M- All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA, and other applicable regulations.
 - N- Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.
 - O- Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
 - P- NIOSH does not evaluate respirators as surgical masks.

USE AGAINST:

- Particulate aerosols free of oil.

DO NOT USE AGAINST:

- Concentrations of contaminants which are unknown, or are immediately dangerous to life or health.
- Concentrations of particulates which exceed the maximum use concentration or 10 times the OSHA Permissible Exposure Limit, whichever is lower.
- Gases, vapors, asbestos, paint spray, sandblasting or particulate materials which generate harmful vapors.
- Oil-based mists.

RESTRICTIONS

- This respirator does not supply oxygen and must not be used in atmospheres containing less than 19.5% oxygen.
- Do not remain in contaminated area if any physical distress occurs, for example breathing difficulty, dizziness or nausea.
- Leave contaminated area and replace respirator if it is damaged, distorted, a proper fit can not be obtained or breathing becomes difficult.
- Prior to each use, carefully inspect the entire respirator, including filter media and strap/weld attachment area for tears and damage. Staple or strap/weld attachment perforations do not affect respirator performance.
- Do not alter, modify, or abuse this respirator.
- Store unused respirators in box/bag in a clean, dry, non-contaminated area.
- Dispose of respirator according to your employer's policy and local regulations.
- Dispose no later than thirty days after first use.
- Use respirator before the "use by" expiration date printed on box/bag.
- If used for welding, wear appropriate eye and face protection.

DISTRIBUTED BY:



Printed on Recycled Paper