

DISPOSABLE RESPIRATORS

airwave®

More Air. More Wear™

Breathing is now a breeze™



MOLDEX®
Ideas that wear well.™

BREATHING IS NOW A BREEZE

MORE AIR. MORE WEAR.™

- Exclusive easy-breathing wave design.
- Less resistance, better breathability.
- Larger surface area of the wave design means more airflow.
- More air and more comfort means more wear and compliance.



MORE FLEX. MORE DURABILITY.

- FlexFit® design moves easily with your face and stays in place.
- Pinch-free molded nose bridge.
- Soft foam nose cushion or full face flange.
- Softspun® lining for increased comfort.
- Dura-Mesh® shell resists collapsing in heat and humidity.
- Meets heat and flame resistance in accordance with ANSI/ISEA 110-2003 Section 7.11.1.

N95 AirWave 2-Strap




▲ 4200 N95

N95 AirWave SmartStrap



▲ 4600 N95

N95 + Nuisance Organic Vapors
AirWave SmartStrap w/ Full Flange

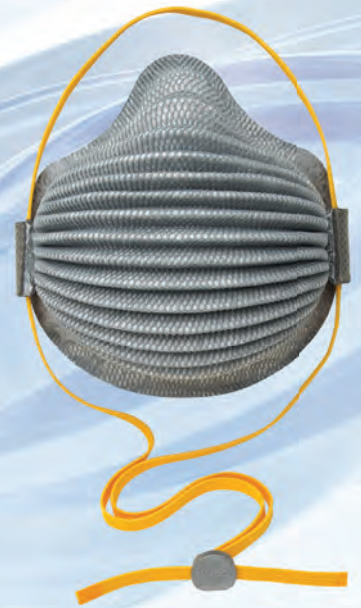


● 4800 N95

Outer Dura-Mesh® keeps
respirator cleaner looking

Inner Dura-Mesh® helps prevent
collapsing from heat and humidity

Filter is protected on
both sides by Dura-Mesh®

Softspun® lining is
comfortable against the face

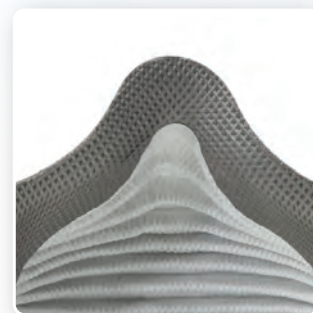

Soft Foam Face Flange on
4300, 4400, 4700 and 4800 models




MORE COMFORT. MORE USE.

- Soft cloth SmartStrap® allows you to adjust for a custom fit.
- Cool and comfortable SmartStrap allows respirator to hang around the neck when not in use.
- Longer use means less waste, fewer respirators used and lower costs.
- Metal-free. (SmartStrap models only)

SMARTSTRAP

Adjustable

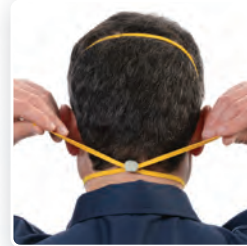

Simply pull straps for a custom fit

Hangable



Break the take-off and toss habit

N100 AirWave SmartStrap w/ Ventex Valve and Full Flange



◆ 4700N100

P95 AirWave SmartStrap w/ Full Flange



◆ 4300P95

P100 AirWave SmartStrap w/ Ventex Valve and Full Flange



◆ 4400P100

▲ **N95 Series Applications:** Grinding, Torch Cutting, Sanding, Metal Pouring, Sweeping, Metal Working, Bagging, Foundries, Stone Quarrying, Agriculture, Metal Machining, Construction Sites, Cement, Ceramics Manufacturing, Underground Mining, Timber/Lumber Mills, Polishing, Buffing, Lime, Poultry, Textiles, Welding, Brazing, Soldering.

● **N95 Plus Nuisance Levels of Ozone and Organic Vapors Applications:** Welding, Arc Cutting, Foundry Operations, Brazing, Plasma Spraying, Laser Beam Cutting/Welding, Laboratory Settings, Agriculture, Petrochemical Manufacturing, Rendering Plants, Auto Repair, Mining Operations, Waste Disposal.

◆ **P100/N100 Series Applications:** Metal Working, Grinding, Sanding, Sweeping, Bagging, Foundries, Pharmaceutical Operations, Power Plants, Environments where an OSHA substance specific standard applies (e.g., lead, cadmium, inorganic arsenic, MDA). Where oil mists are present, either alone or in combination with solid particulates, an R or P respirator must be used.

◆ **P95 Series Applications:** Where oil mists are present, either alone or in combination with solid particulates, Construction, General Manufacturing, Mining, Oil & Gas, Transportation.

Always refer to instructions before using.

Product Code	Size	Flange Type	Strap Material	Adjustable/Hangable SmartStrap	Display Quantity	Case Quantity
4200 N95	M/L	Nose	Latex	No	10/Box	8 Boxes
4201 N95	S	Nose	Latex	No	10/Box	8 Boxes
4600 N95	M/L	Nose	Cloth	Yes	10/Box	10 Boxes
4601 N95	S	Nose	Cloth	Yes	10/Box	10 Boxes
4800 N95	M/L	Full	Cloth	Yes	8/Box	10 Boxes
4700N100	M/L	Full	Cloth	Yes	5/Box	6 Boxes
4300P95	M/L	Full	Cloth	Yes	8/Box	10 Boxes
4400P100	M/L	Full	Cloth	Yes	5/Box	6 Boxes

M/L = Medium/Large

S = Small



DISTRIBUTED BY:



MOLDEX
Ideas that wear well.

MOLDEX-METRIC, INC.
10111 Jefferson Blvd.
Culver City, CA 90232
TEL: +1 (800) 421-0668 or
+1 (310) 837-6500
FAX: +1 (310) 837-9563
E-mail: sales@moldex.com
www.moldex.com

MOLDEX TECHNICAL SERVICE DEPARTMENT
+1 (800) 421-0668 or
+1 (310) 837-6500 ext. 512/550
E-mail: tech@moldex.com

CANADIAN CUSTOMER SERVICE
TEL: +1 (800) 421-0668, Ext. 550
FAX: +1 (310) 837-9563

4246-807 REV G 01/19



Printed on Recycled Paper



Made in
U.S.A.