


# **DISPOSABLE EARPLUGS**



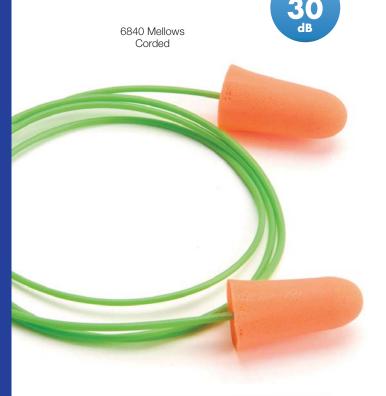

## **SOFT COMFORTABLE FIT**

Mellows earplugs are made of extra-soft, extra-light foam. Their tapered shape fits easily in the ear canal, and seals gently and snugly without pressure. They're so comfortable you'll forget you're wearing earplugs.

## **ALL-DAY WEAR**

The low pressure, smaller design of Mellows is perfect for extended periods of wear. Mellows provide maximum foam comfort with the appropriate protection for mid to high level noise areas.

#### NRR 30. INDEPENDENTLY TESTED NRR.

Mellows are independently tested to ANSI S3.19-1974. So you know you're getting excellent protection against industrial noise.

#### **HIGH VISIBILITY COLOR**

A very bright orange plug color makes compliance checks easy and quick.

## **AVAILABLE IN PLUGSTATION DISPENSER**

Moldex offers the convenience, increased compliance and cost savings of our popular earplug dispenser, the PlugStation, with Mellows foam earplugs, Uncorded. With the PlugStation, you can afford to put earplugs in all the places they're needed. PlugStation's convenience, ease of use, and high visibility lead to higher compliance and by giving quick acces to workers It also saves worktime.

- Compliance High visibility to increase awareness for your hearing conservation program
- Convenience Hang a PlugStation anywhere plugs are needed
- Cost Savings Workers take one pair at a time so there are no wasteful grabbing of multiple pairs

# **FEATURES**

- Independently tested to ANSI S3.19-1974, NRR 30dB.
- Extra-soft, extra-light foam for superior all-day comfort.
- High visibility orange color makes compliance checks quick and easy.
- Tapered shape for easy insertion and removal.
- Shaped to fit even very small ear canals.
- Non-irritating smooth surface.
- 100% PVC Free.



6846 Mellows PlugStation Uncorded / 250 Pairs



6847 Mellows PlugStation Uncorded / 500 Pairs





# **DISPOSABLE EARPLUGS**

PART # / DESCRIPTION	DISPLAY	CASE
6820 Mellows, Uncorded	200 Pairs per Box	10 Boxes per Case
6840 Mellows, Corded	100 Pairs per Box	20 Boxes per Case
6846 Mellows PlugStation Uncorded	250 Pairs per Dispenser	6 Dispenser per Case
6847 Mellows PlugStation	500 Pairs per Dispenser	4 Dispenser per Case

## **WARNING TO USER**

- Use this laboratory-derived attenuation data for comparison purposes only.
   The amount of protection afforded in field use often is significantly lower depending on how the protectors are fitted and worn.
- 2. Failure to follow all instructions could result in hearing loss or injury.
- Failure to obtain a proper fit will reduce effectiveness of hearing protectors and could result in hearing loss or injury.
- 4. Mellows earplugs must only be used as part of a hearing conservation program that complies with applicable local safety and health regulations.
- Overprotection can be dangerous. The wearer must be able to hear warning signals.
- 6. Wearers with hearing loss should exercise extreme caution.
- It is the employer's responsibility to ensure that the type of hearing protector and its NRR is appropriate for the user in their particular workplace.
- 8. Use caution when working around machinery or other equipment to ensure neck cord does not become caught or entangled.
- 9. Failure to follow these warnings could result in serious injury or death.

## **MOLDEX TECHNICAL ASSISTANCE**

Moldex provides all of the technical assistance required to set up a hearing protection program. For more information call +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550 or E-mail: tech@moldex.com or visit www.moldex.com.

Keep earplugs away from infants and small children as they may get caught in the windpipe and create a choking hazard.



# ATTENUATION DATA Tested According to ANSI Spe

Tested According to ANSI Specs S3.19-1974 by Michael & Assoc., State College, PA.

Frequency (Hz)	125	250	500	1000	2000	3150	4000	6300	8000		
Mean Attenuation (dB)	26.2	32.3	41.0	37.8	38.3	47.3	47.7	48.0	45.7	NRR 30	CSA
Standard Deviation (dB)	3.4	4.0	4.4	3.7	2.5	4.6	3.4	3.5	4.3		AL

## **DISTRIBUTED BY:**



#### **MOLDEX-METRIC, INC.**

10111 West Jefferson Blvd. Culver City, CA 90232 TEL: +1 (800) 421-0668 or

+1 (310) 837-6500 FAX: +1 (310) 837-9563 E-mail: sales@moldex.com www.moldex.com

## **CANADIAN CUSTOMER SERVICE**

Tel: +1 (800) 421-0668, Ext. 550/512 Fax: +1 (310) 837-9563







